



FLEXIGLASS APPLICATION MANUAL - SECTION 5.2C

TJM BADGE APPLICATION - ISSA1



Note: Familiarise yourself with the instructions before you start to ensure you are clear on all aspects of the fit

SAFETY EQUIPMENT
• Safety Gloves

TOOLS REQUIRED
• Knife
• Tape
• Ruler
• Scissors

MATERIALS & PARTS REQUIRED		
Part No.	Description	Qty.
K3550	TJM Badge (37 x 67)	2
	TJM Badge Jig Drawing (Section 5.2D)	1
	Cardboard	170 mm x 130 mm

- 1 Print out the TJM Badge Jig Drawing.
- 2 Cut the TJM Badge Jig Drawing with scissors by leaving at least 10mm distance from lines. **See ILL 1**
- 3 Place and tape the drawing on the Cardboard (170mm X 130mm).
- 4 Cut the lines by using a knife and a ruler to make staright cut. **See ILL 2**
- 5 Remove the cut piece.
- 6 Wrap the cut piece by tape to increase strength. **See ILL 3**

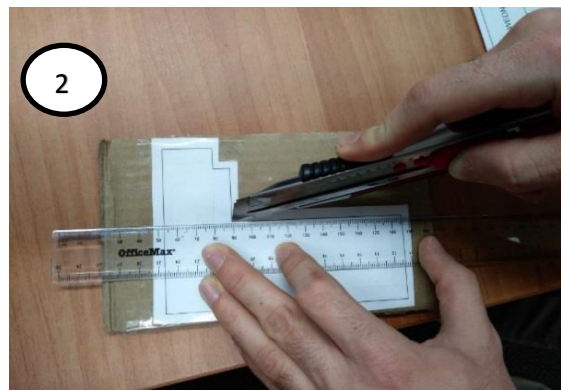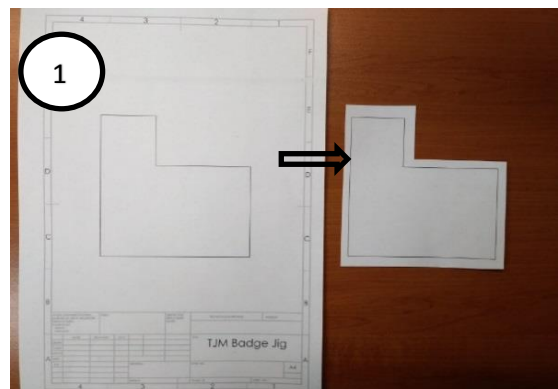

- 7 Place the jig on the canopy. Align bottom with canopy horizontally. **See ILL 4**
- 8 Align and place the K3550, TJM Badge (37 X 67) between the end point of window and canopy. **See ILL 4**

