

# FLEXIGLASS



## 5.2M - Tool Drawer Single Tray Fit

### SAFETY EQUIPMENT

- Hearing protection as required
- Eye protection as required

### TOOLS REQUIRED

- Pneumatic / Electric Drill (5 & \*6 mm) 
- Pneumatic / Electric driver 
- Pneumatic / Manual Rivet Gun 

### MATERIALS & PARTS REQUIRED


Part No.	Description	Qty.
A	Trundle Draw	1
B	Trundle Mount Bar	4
C	Rivet	8
D	Rubber Block	2
E	Bolt	2
F	Nut	2
G	*Strap	2
H	*Bolt	4
I	*Nut	4
J	*Washer	8

### GENERAL NOTES

- Please read the fitting instructions prior to fitting the accessory.
- Install this accessory by following these fitting instructions. Please Note: Failure to follow these fitting instructions could result in damage to the vehicle and / or accessory.
- Recycle discarded components and packaging in accordance with the local regulations.
- Inspect the vehicle and note any damage or concerns found prior to accessory fitment. If there are any concerns contact the manufacturer before installing the accessory.
- If any damage or concerns are found that may interfere with the installation of the accessory, inform the customer prior to fitting the accessory.
- Ensure that you take care of and safely store any components that are removed from the vehicle.
- Ensure all bare metal surfaces are protected using an automotive bare metal primer and touch-up paint or suitable soft seal compound with rust inhibitor.
- Ensure any metal swarf or dust is carefully removed from all vehicle surfaces.
- Do not make any repairs or modifications to this accessory as it will void the warranty.
- Do not remove any of the accessory's labels.

### WARNING

- \*Parts to be used, if Tool Drawer and Tail Light Protector is/will be fitted together. License Plate Bracket must be fitted to the specified position to meet State Regulations (Please refer to final(\*) step).

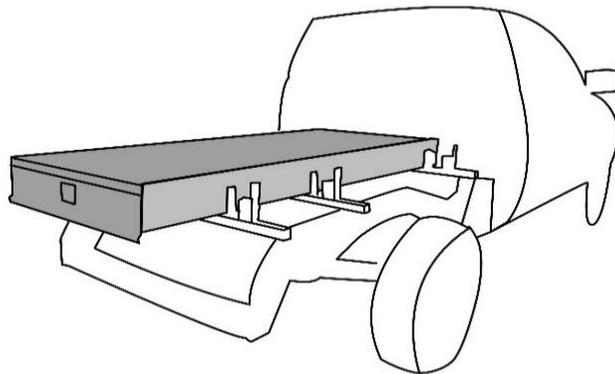


BCTDR21C02

ISSUE 1

16/04/2019

Page No : 1/4


1

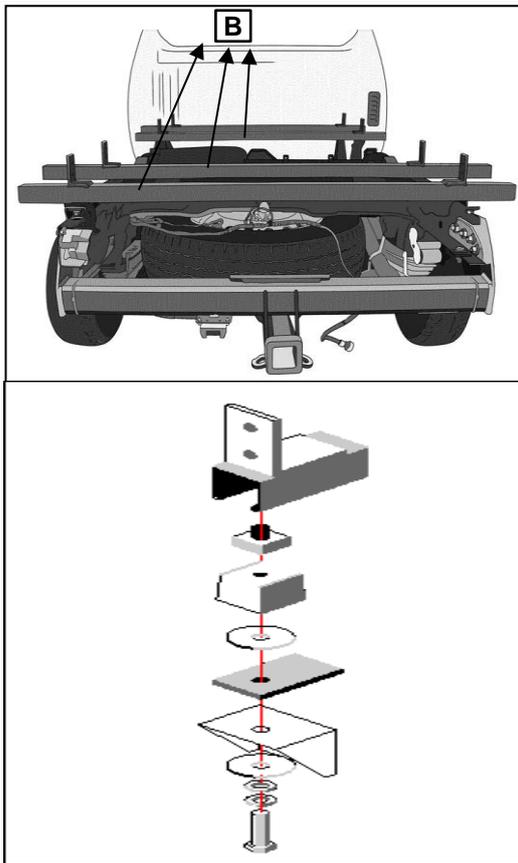


- Replace the previous bars with **B** (Trundle Mount Bars)
- Use the same fasteners/parts and alignment to fit the **B** (Trundle Mount Bars)
- Please refer to **Standard Tray Fitment Instructions** for details.



2

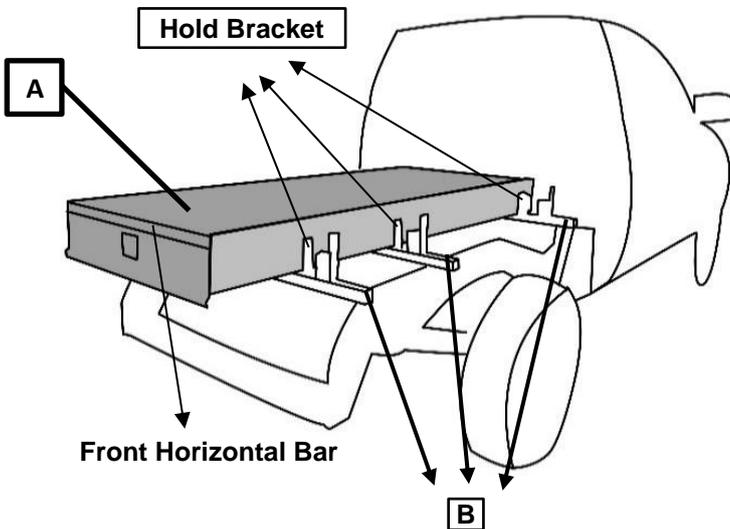

- Locate the **A** (Trundle Draw) between hold brackets of the bars.

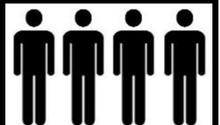


BCTDR21C02

ISSUE 1

16/04/2019

Page No : 2/4


3

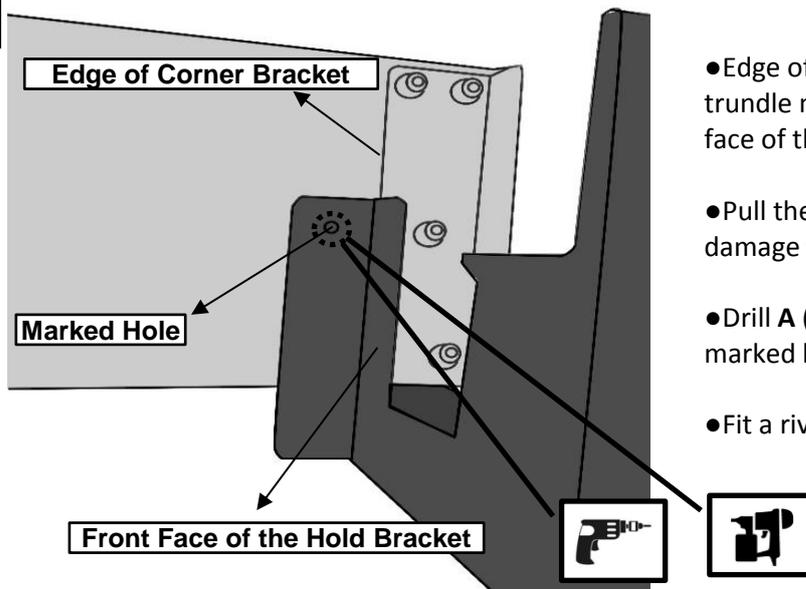


- Edge of the Corner Bracket of the trundle must be aligned with the Front face of the Holder.
- Pull the drawer out carefully to not to damage while drilling.
- Drill A (Trundle Draw) through the marked hole with 5mm drill bit.
- Fit a rivet through the marked hole.




4

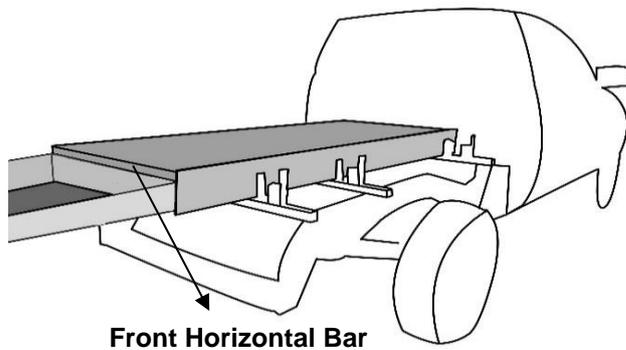


- Pull the drawer out about 1.2meter (until the stopper predrilled hole is visible).

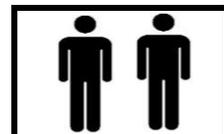

5

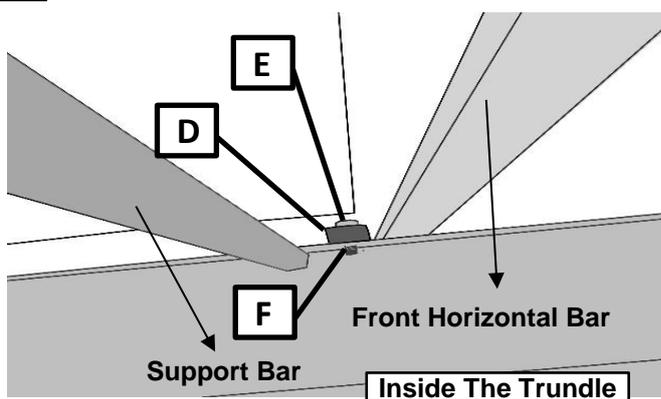

- Fit the D (rubber block), E (bolt) and F (nut) to the predrilled hole which located right before the support bar. The top horizontal bar of the casing will stop the drawer coming ones the rubber block is bolted.

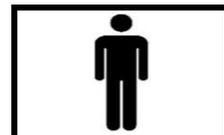


BCTDR21C02

ISSUE 1


16/04/2019

Page No : 3/4




6

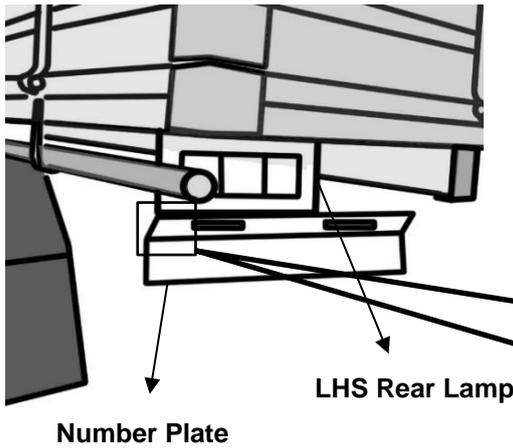


- Extend the pre-drilled holes to fit the number plate bracket underneath the LHS rear lamp bracket. Align the left(outer) sides of the lamp bracket and number plate.
- Please refer to **Standard Tray Fitment Instructions for Number Plate Bracket** fitment details.

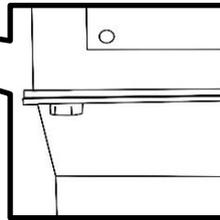

\*

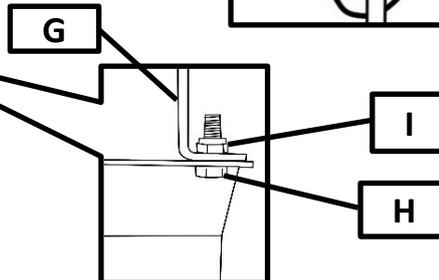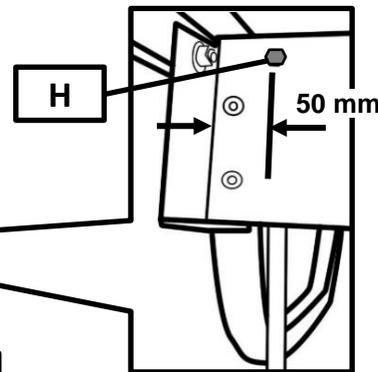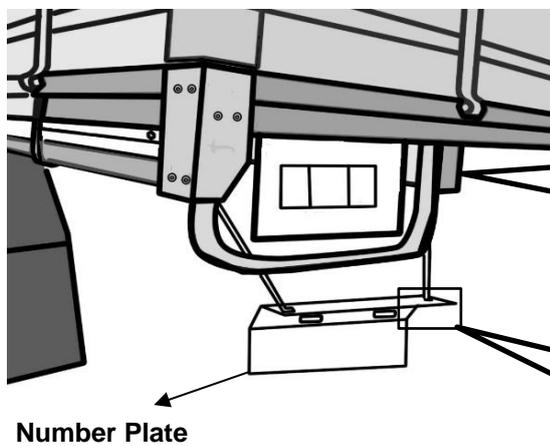


**Banded Straps Measurements**

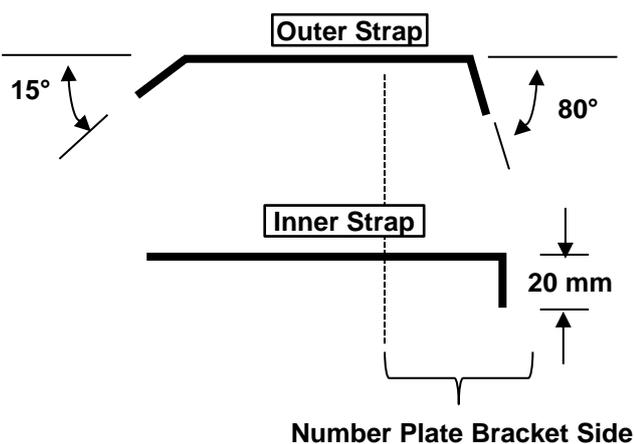

If Tool Drawer and Tail Light Protector is/will be fitted together;

- Fit the tail light bracket assembly to the underside the rear plank.
- Bend straps according to measurements(20 mm from the edges)
- Drill the holes as indicates with 6mm drill bit
- Fit the G(Straps), H (Bolts) and I (Nuts) with J (Washers)to the pre-drilled holes on number plate bracket(extend the holes with 6mm drill bit)

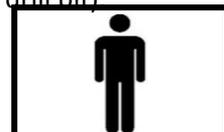

BCTDR21C02

ISSUE 1

16/04/2019

Page No : 4/4