FLEXIGLASS



5.2T - Floor Mat Super CAB Tray Fit

S	SAFETY EQUIPMENT
•	Hearing protection as required
•	Eye protection as required

MATERIALS & PARTS REQUIRED			
Part No.	Description	Qty.	
А	Mat Rubber 8X6	1	


TOOLS REQUIRED

• Pneumatic / Electric Hacksaw



GENERAL NOTES

- Please read the fitting instructions prior to fitting the accessory.
- Install this accessory by following these fitting instructions. Please Note: Failure to follow these fitting instructions could result in damage to the vehicle and / or accessory.
- Recycle discarded components and packaging in accordance with the local regulations.
- Inspect the vehicle and note any damage or concerns found prior to accessory fitment. If there are any concerns contact the manufacturer before installing the accessory.
- If any damage or concerns are found that may interfere with the installation of the accessory, inform the customer prior to fitting the accessory.
- Ensure that you take care of and safely store any components that are removed from the vehicle.
- Ensure all bare metal surfaces are protected using an automotive bare metal primer and touch-up paint or suitable soft seal compound with rust inhibitor.
- Ensure any metal swarf or dust is carefully removed from all vehicle surfaces.
- Do not make any repairs or modifications to this accessory as it will void the warranty.
- Do not remove any of the accessory's labels.

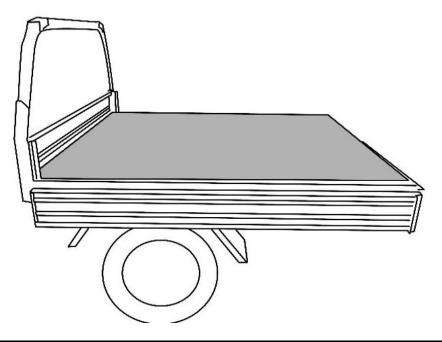



20 Mins



MAT8X6

ISSUE 1

16/04/2019

Page No : 1/2

