## FLEXIGLASS



## 5.2U - Floor Mat Double CAB Tray Fit

SAFETY EQUIPMENT	
<ul> <li>Hearing protection as required</li> </ul>	
<ul> <li>Eye protection as required</li> </ul>	

MATERIALS & PARTS REQUIRED		
Part No.	Description	Qty.
А	Mat Rubber 8X6	1


## **TOOLS REQUIRED**

• Pneumatic / Electric Hacksaw



## **GENERAL NOTES**

- Please read the fitting instructions prior to fitting the accessory.
- Install this accessory by following these fitting instructions. Please Note: Failure to follow these fitting instructions could result in damage to the vehicle and / or accessory.
- Recycle discarded components and packaging in accordance with the local regulations.
- Inspect the vehicle and note any damage or concerns found prior to accessory fitment. If there are any concerns contact the manufacturer before installing the accessory.
- If any damage or concerns are found that may interfere with the installation of the accessory, inform the customer prior to fitting the accessory.
- Ensure that you take care of and safely store any components that are removed from the vehicle.
- Ensure all bare metal surfaces are protected using an automotive bare metal primer and touch-up paint or suitable soft seal compound with rust inhibitor.
- Ensure any metal swarf or dust is carefully removed from all vehicle surfaces.
- Do not make any repairs or modifications to this accessory as it will void the warranty.
- Do not remove any of the accessory's labels.

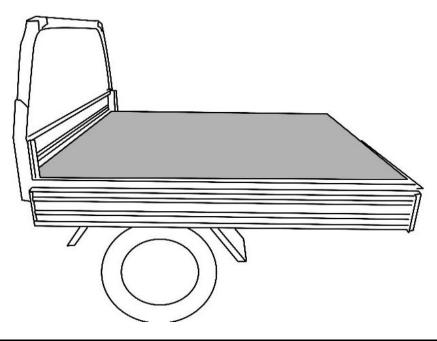



20 Mins



MAT8X6

**ISSUE 1** 

16/04/2019

Page No : 1/2

