

# FLEXIGLASS



## 5.2R - Water Tank Tray Fit

### SAFETY EQUIPMENT

- Hearing protection as required
- Eye protection as required

### TOOLS REQUIRED

- Pneumatic / Electric Drill



- 6mm Drill bit



- Pneumatic / Electric driver



### MATERIALS & PARTS REQUIRED

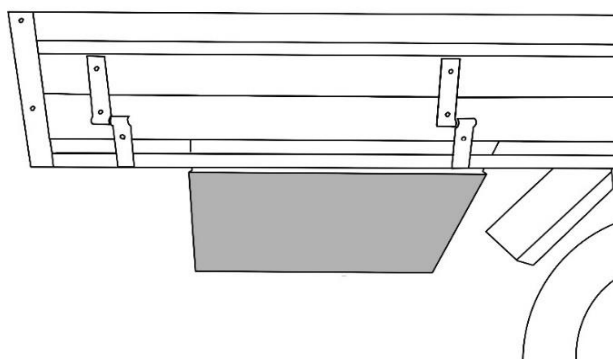
Part No.	Description	Qty.
A	Slant Water Tank	1
B	Bracket	2
C	Bolt M6-50	8
D	Nut Nylock N6	8
E	Washer	16

### GENERAL NOTES

- Please read the fitting instructions prior to fitting the accessory.
- Install this accessory by following these fitting instructions. Please Note: Failure to follow these fitting instructions could result in damage to the vehicle and / or accessory.
- Recycle discarded components and packaging in accordance with the local regulations.
- Inspect the vehicle and note any damage or concerns found prior to accessory fitment. If there are any concerns contact the manufacturer before installing the accessory.
- If any damage or concerns are found that may interfere with the installation of the accessory, inform the customer prior to fitting the accessory.
- Ensure that you take care of and safely store any components that are removed from the vehicle.
- Ensure all bare metal surfaces are protected using an automotive bare metal primer and touch-up paint or suitable soft seal compound with rust inhibitor.
- Ensure any metal swarf or dust is carefully removed from all vehicle surfaces.
- Do not make any repairs or modifications to this accessory as it will void the warranty.
- Do not remove any of the accessory's labels.

### WARNING

- If Water Tank is/will be fitted, the original mounting position of the Rear Ladder Rack must be changed. Please refer to Rear Ladder Rack Instruction.



**30 Min**

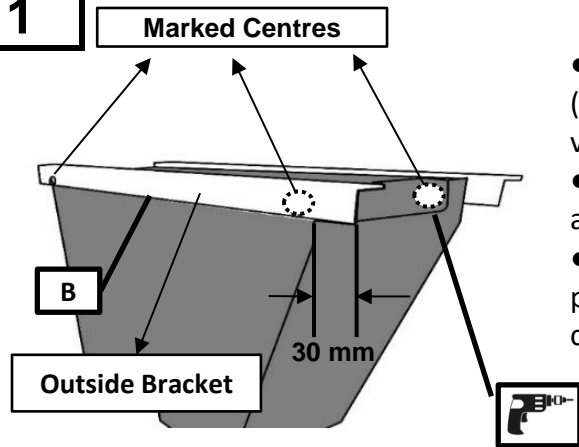


WAT120

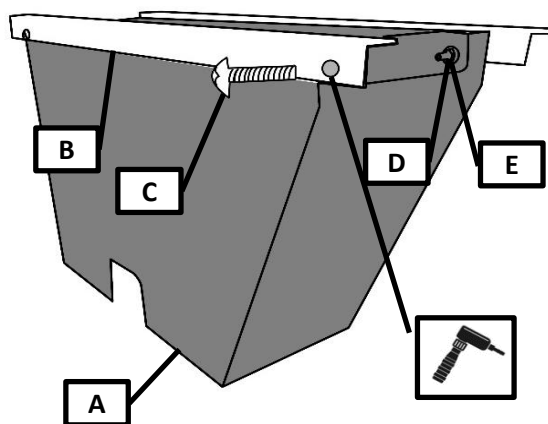
ISSUE 1

16/04/2019

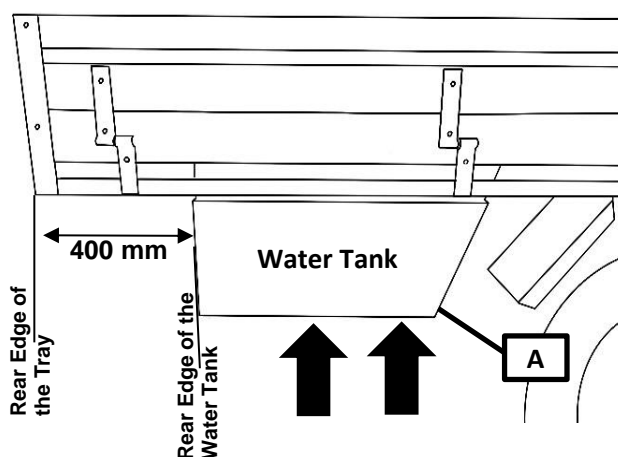
Page No : 1/3

**1**

- Locate **B** (Brackets) on the water tank.  
(The edge of the water tank towards outside of the vehicle, must cover with the bracket.)
- Leave 30 mm gap between from faces of the bracket and the water tank.
- Mark the centre of holes on **B** (Bracket) by using the pre-drilled holes on the water tank and drill the marked centres with 6mm drill bit.

**2**

- Fit and fully tighten the **C** (Bolt M6-50), **E** (Washers) & **D** (Nut Nylock N6) to fit **B** (Brackets) brackets to **A** (Slant Water Tank).  
(The bracket towards outside of the vehicle, must cover the edge of the water tank.)

**3**

- Leave 400 mm distance between the rear edge of the tray and rear edge of the water tank.

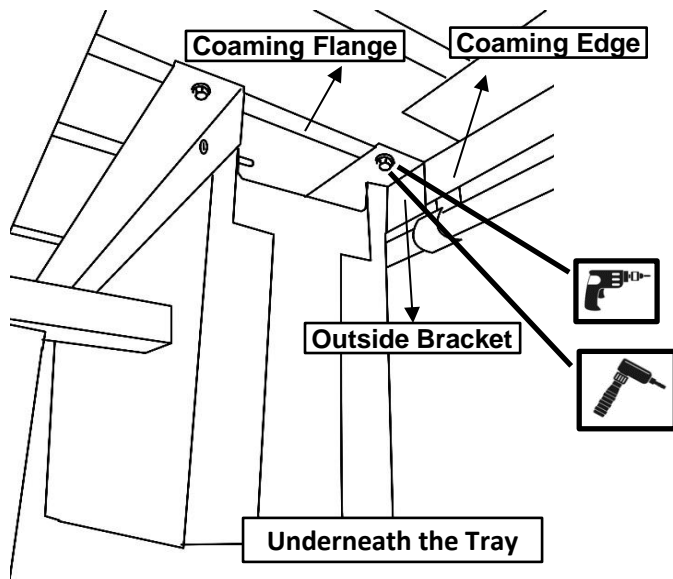


WAT120

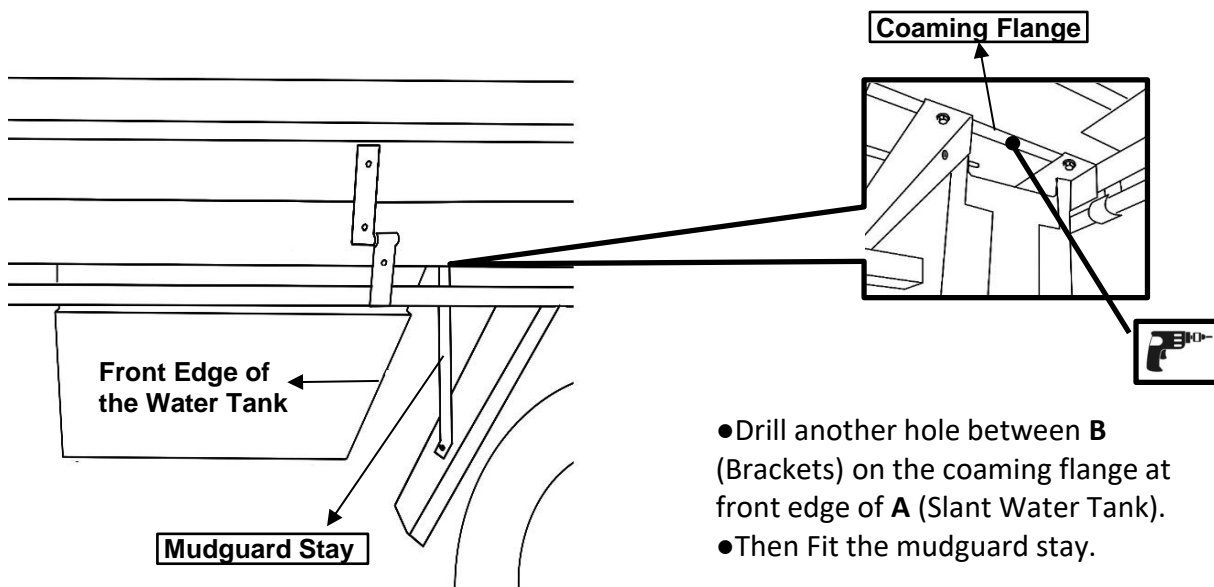
ISSUE 1

16/04/2019

Page No : 2/3

**4**

- Ensure that outside **B** (Brackets) located at the corner of Coaming Edge and Coaming Flange
- Drill through the **B** (Brackets) to make a hole on the coaming edge.
- Fit and tighten the **C** (Bolt M6-50), **E** (Washers) & **D** (Nut Nylock N6).

**5**

- Drill another hole between **B** (Brackets) on the coaming flange at front edge of **A** (Slant Water Tank).
- Then Fit the mudguard stay.



WAT120

ISSUE 1

16/04/2019

Page No : 3/3